



## Dome Light Assembly Instructions

To remove and replace the dome light assembly, grasp the base of the spring-loaded rear-view mirror in your hand and pull it off to the left or right side. The spring loaded attachment will release from the metal plate above. Detach any HomeLink wires connected to the mirror. Set the mirror aside. There are three screws attached to a metal plate and two screws behind the two dome light lenses that hold the console in place. Pry the two lenses out with a small screwdriver to access the screws behind these bulbs. Detach any wiring connections and remove the assembly.

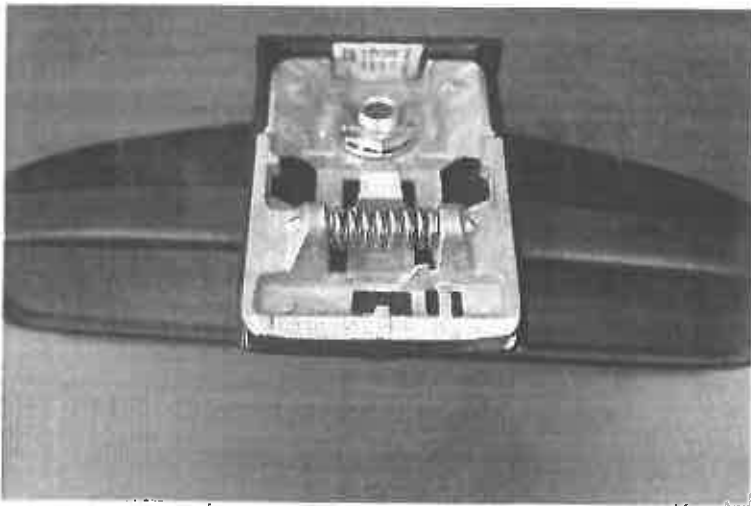


Spring loaded mirror attachment

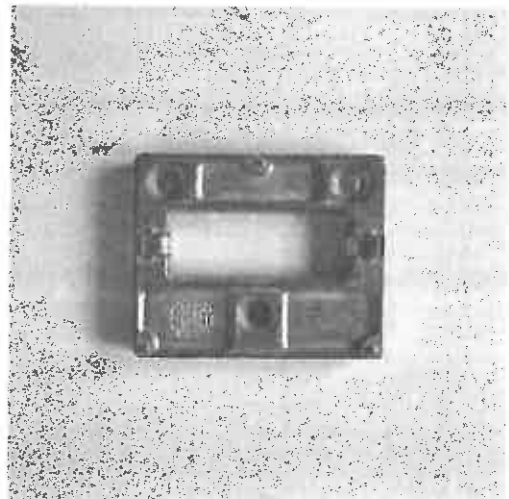

Metal plate

Removal and replacement of the electronic "guts" of the assembly is fairly straightforward. There are six visible points or dots where the black plastic electronic plate is attached to the molded outer assembly. Five of the six points are easily visible, while the sixth is just behind the cylindrical buzzer on the upper right-hand side. Use a Dremel to detach or cut away those six spots. Make sure these holes are opened wide and free of any plastic or glue residue. Remove the black plastic electronic plate including the switches, the included trim tool may be helpful to pull it out. Insert the black plastic electronic insert with the switches into the new dome light cover. Make sure the insert sits properly, including the switches. Use some epoxy to secure the attachment spots, and wait 24 hours for it to set properly. You may need to use clamps to hold it in place. Once dry, replace the unit in the car.

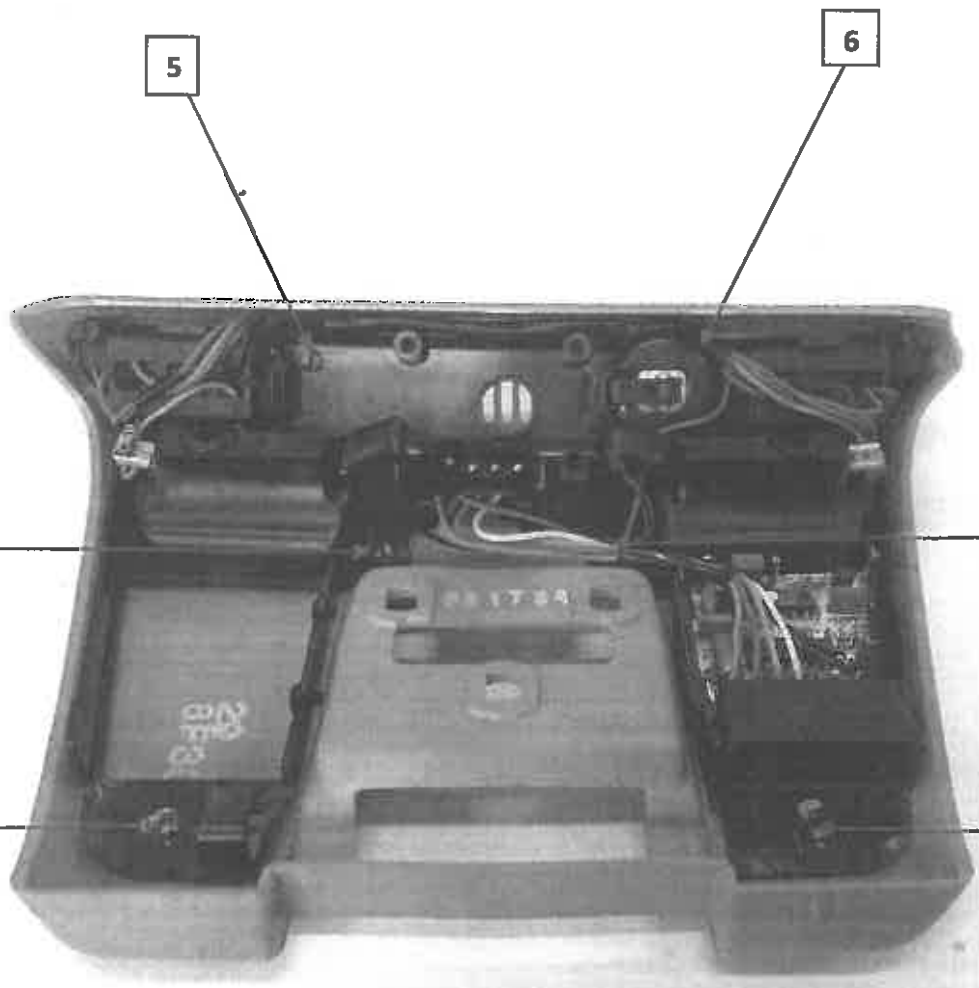

5

6

1

4

2

3